 


# THE-REMOTE PRO INSTRUCTIONS


*A universal wildlife feeder remote control*

## Receiver Installation Instructions


1. Drill 7/16" hole into control box to mount receiver with antenna pointing down. Receiver is held in control box by the finger nut under the antenna.
2. Connect black/red wire to 6v or 12v power source.
3. THE-REMOTE is designed to plug directly into THE-TIMER but can operate any 6v or 12v motor.
4. For THE-TIMER, simply plug marked connectors into the motor and THE-TIMER.

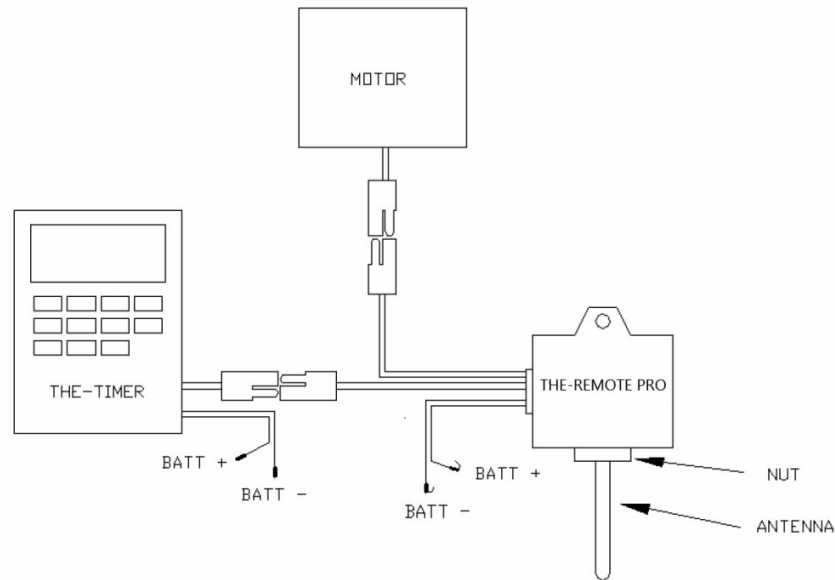

**Note:** When THE-REMOTE is wired into a timer (one other than THE-TIMER) and a motor circuit, the user must verify the polarity of the wires from the timer to the motor. Do not assume polarity based on wire coloring. To determine polarity from your timer to the motor, we recommend that you use a multi-meter. Damage could occur to the timer if your timer has no internal protection. When using a timer other than THE-TIMER, the user will not use the "to timer" wiring but will only use the "to motor" wiring splicing into the timer to motor circuit.

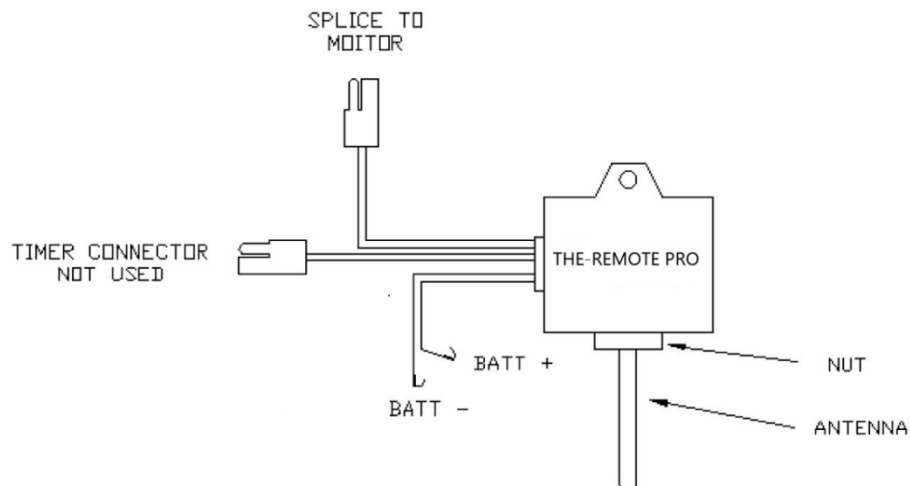

## Installation Diagram for THE-REMOTE PRO

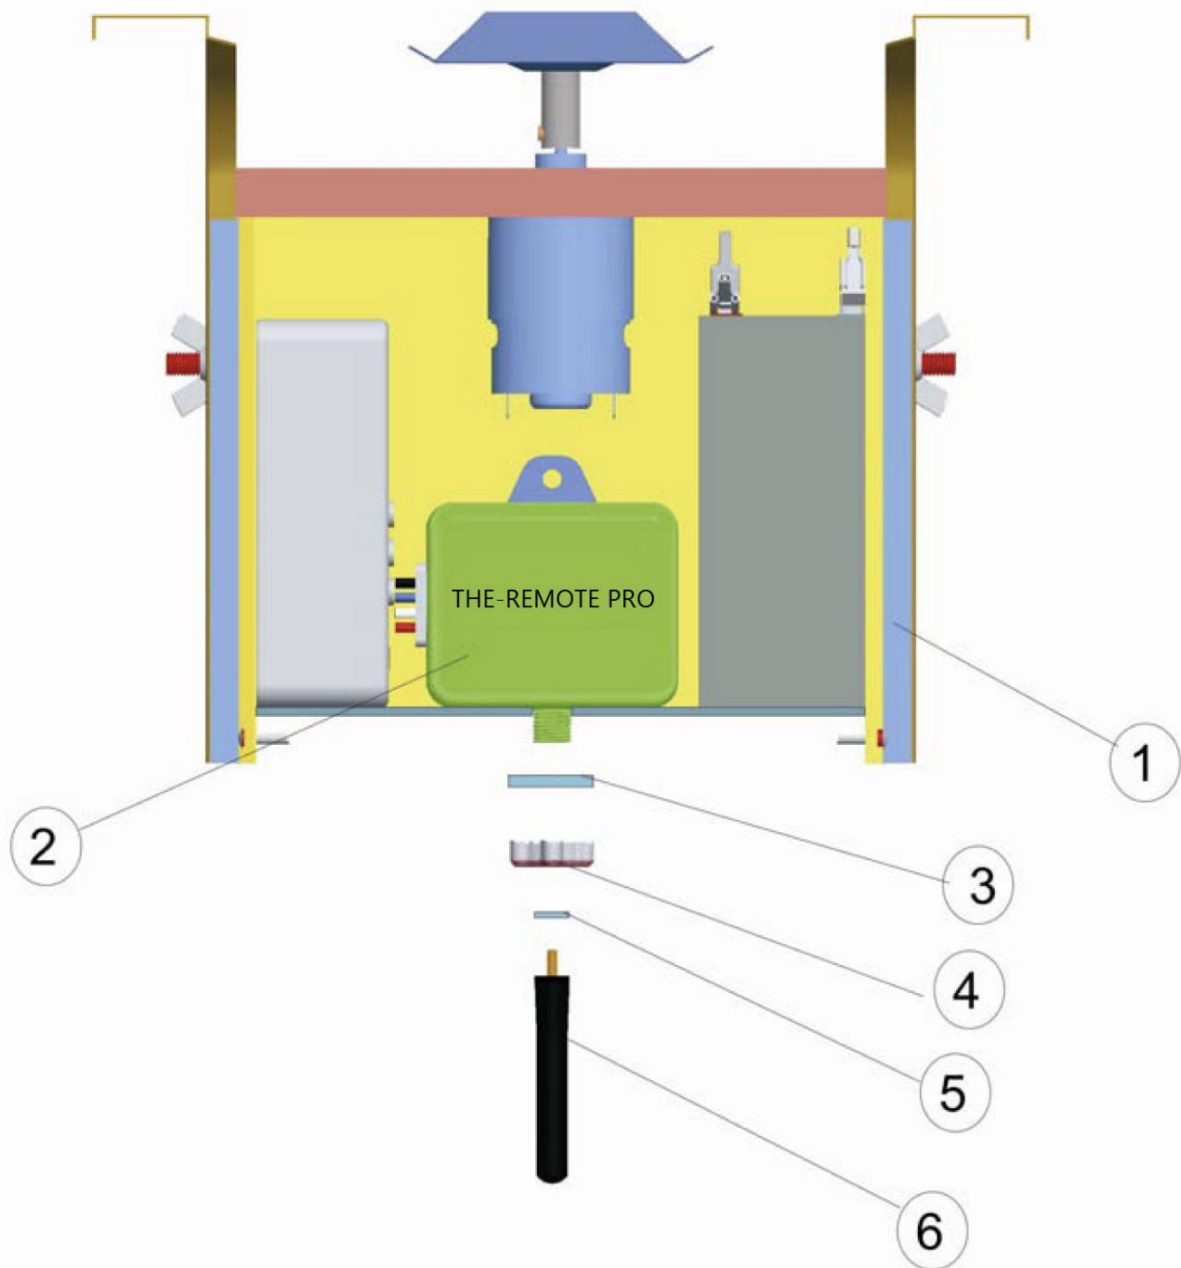

1. Metal Case
2. THE-REMOTE PRO
3. Nut Spacer
4. Finger Nut
5. Antenna Spacer
6. Antenna


## **Transmitter Instructions**

 - Hold transmitter with antenna pointing upwards and depress orange button to activate the remote.

## **How to Change Channels**

THE-REMOTE PRO has 10 individual channels that can be used. Follow the simple steps below to change channels on the receiver.

1. Use the thumb dial on the receiver to change to the desired channel.
2. Disconnect and reconnect the battery to retain the change in channel made.
3. Ensure the transmitter channel matches the receiver channel.
4. Repeat steps 1-3 for all other receivers.

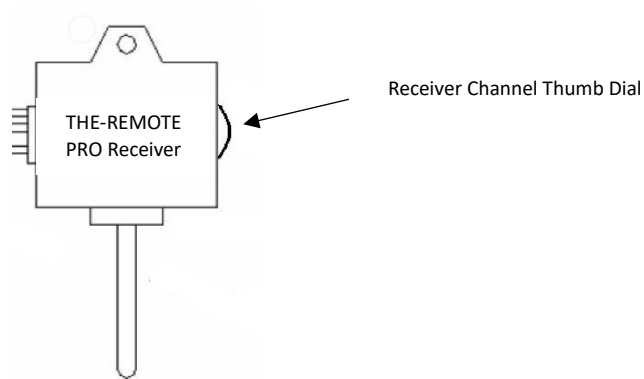

**Note:** Channel "0" on THE-REMOTE PRO is the same preset channel that is also on THE-REMOTE.

For more tips and tricks about THE-REMOTE and THE-REMOTE PRO go to [www.the-remote.com](http://www.the-remote.com)